


## Harmony End & Coffee Table Assembly Instructions


**Model Number  
HA2828 & HA2848**

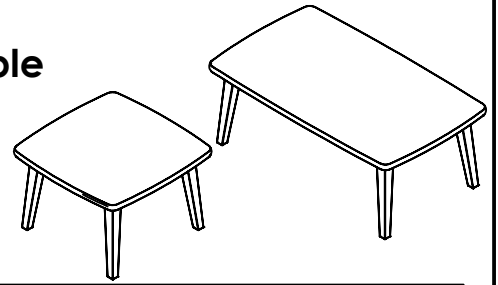

www.norix.com • TEL 800 234-4900

Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

| Parts List |      |              |   | Tools Needed                 |
|------------|------|--------------|---|------------------------------|
| ITEM       | QTY. | PART NUMBER  | DESCRIPTION                                 | Low RPM Variable Speed Drill |
| A          | 4    | 005-123-XXX  | Table Leg Assy, Harmony, Finish XXX         |                              |
| B          | 20   | 021-150      | Screw, 1/4-20 x 7/8", Torx T-30, Back Oxide |                              |
| C          | 1    | 051-L001-XXX | End Table, Harmony, Top Assy                |                              |
| OR         |      |              |   |                              |
| C2         | 1    | 051-L005-XXX | Coffee Table, Harmony, Top Assy             |                              |

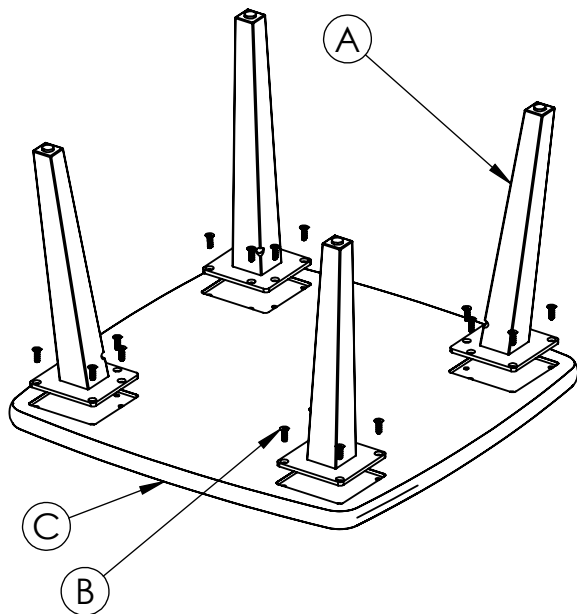

### STEP 1:

Prior to assembly - Open all packaging and confirm Parts List.  
Keep all panels on a protective surface during assembly.  
Be sure to hand start all screws/nuts to avoid cross-threading.

### STEP 2:

Attach the Leg Assy. (A) to Tabel Top (C/C2) Using (5) 1/4-20 x 7/8" Screws (B). Repeat for each Leg.

