

Oasis Classroom Table Glided Assembly Instructions

**For Model Number
O23072-XXXXXXX-XXXX-XXXG**

www.norix.com • TEL 800 234-4900

Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

PARTS LIST


ITEM	QTY	PART NUMBER	DESCRIPTION
A	1	033-3206-XX	Oasis Classroom Table Frame
B	1	053-3072-MA-YYZZZ-J	Top, Oasis, 30x72, Juvenile Class, Laminate Top, Molded-Edge
C	3	033-3204-XX	Oasis Glided Leg
D	8	026-006	Washer, Flat, 11/32 ID x 3/4" OD x 0.050 THK 18-8 SST
E	8	025-030	Washer, Lock, Split, 5/16", Blk Ox.
F	8	021-050	Screw, 5/16"-18 x 1" BH, Pin in Torx T-40, Black Oxide, Loctite
G	12	021-002	Screw, Machine 5/16"-18 X 1-1/4" L, FH, Pin in Torx® T40, Black Oxide, Thd. Lk.

Tools Needed

- Low RPM Variable Speed Drill
- Rubber Mallet

Step 1:

Place Table Top on protected surface. Attach Leg Frame to Table Top using (8) 5/16-18 x 1" Screws(F), (8) 5/16 Lock Washers(E), and (8) 11/32 Flat Washers(D).

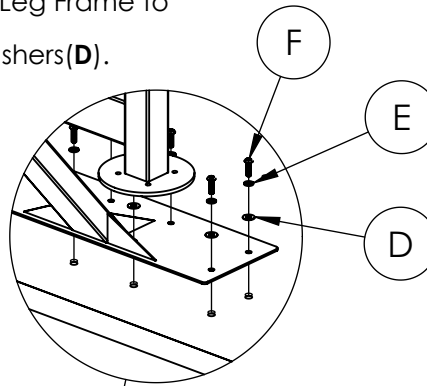

Step 2:

Attach Leg to Table Top using (4) 5/16-18 x 1 1/4" Screws(G). Repeat for other Legs.

