 


Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

Parts List (For One Seat)				Tools Needed
ITEM	QTY.	PART NUMBER	DESCRIPTION	
A	8	021-050	Machine Screw, 5/16"-18 x 1", Black Oxide	Low RPM Variable Speed Drill
B	8	025-011	Lock Washer, 5/16", Zinc	T27 & T40 Drivers
C	8	026-006	Flat Washer, 11/32" x 3/4" x .050, SST	1/4" Hex Driver
D	8	021-072	Machine Screw, 1/4"-20 x 2", Zinc	Rubber Mallet
E	16	025-022	Flat Washer, 9/32" x 5/8" x 0.065", Zinc	Thread Lock Compound (optional)
F	4	025-018	Nut, Hex, 1/4"-20, Zinc	
G	1	060-182	Oasis Plastic Seat Spacer	
H	1	060-193	Plate, Oasis, Seat, 7Ga, Black	
J	1	040-32XXX	Seat, Oasis, 17" Wide	



 
A



B



C




D




E



 
F




G

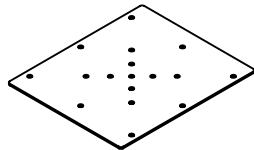

H

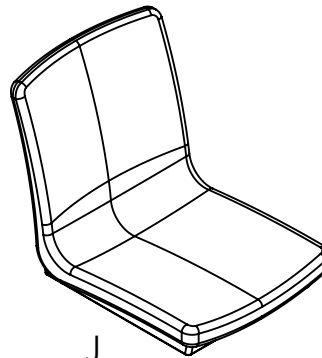

J

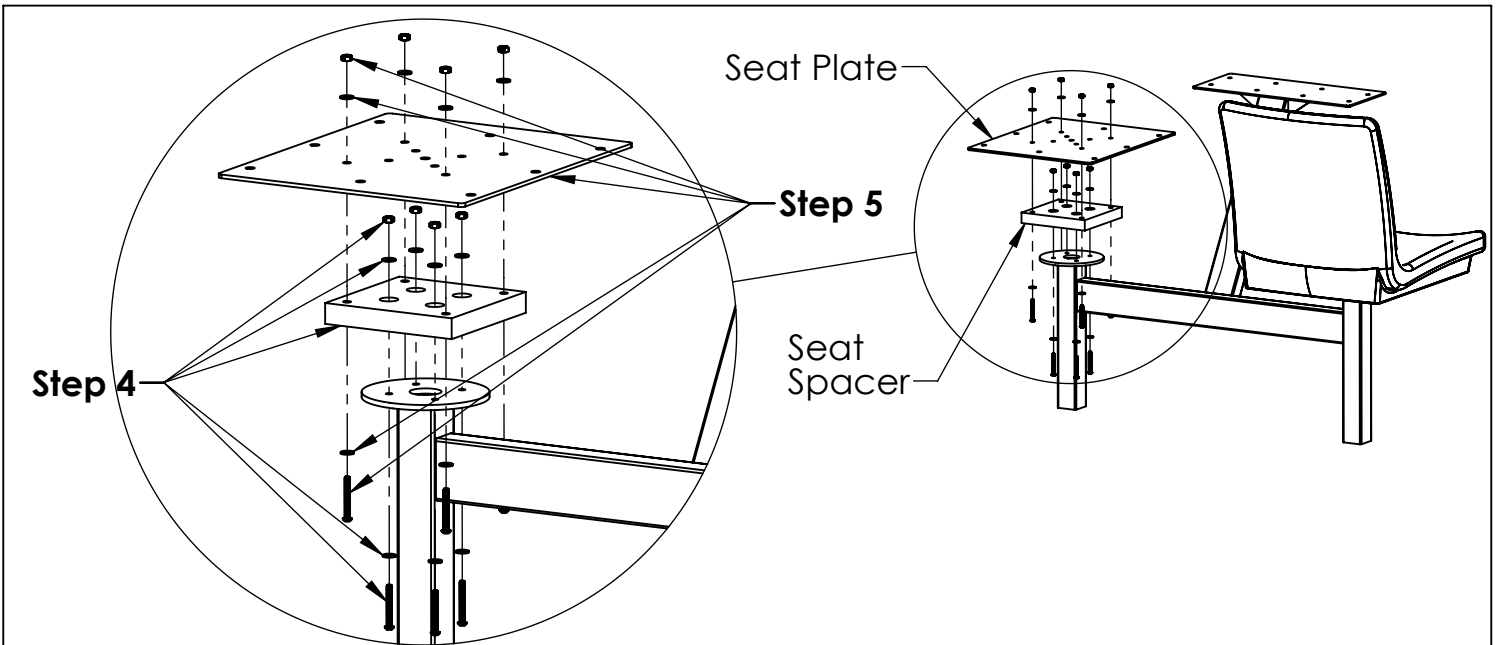


Step 1:

Attach Seat Spacer to Table Frame using (4) 1/4-20 x 2" BH Screws, (8) 9/32 Flat Washers, and (4) 1/4-20 Lock Nuts. The Flat washers should be placed on both sides of the spacer.

Step 2:

Secure Seat Plate to Spacer using (4) 1/4-20 x 2" Screws, (8) 9/32 Flat Washers, and (4) 1/4-20 Locking Nuts.

Repeat Steps 4 and 5 for other three locations

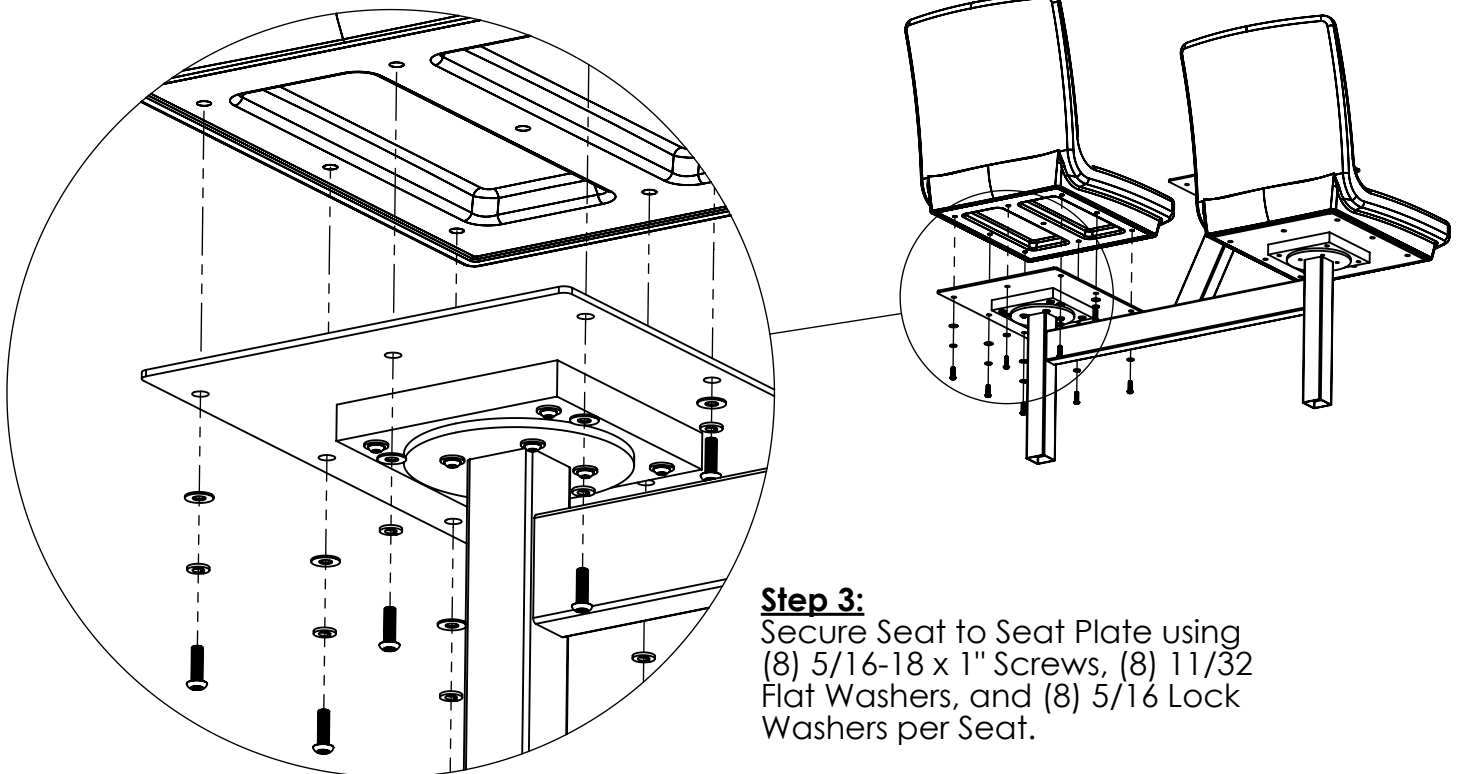

Step 3:

Secure Seat to Seat Plate using (8) 5/16-18 x 1" Screws, (8) 11/32 Flat Washers, and (8) 5/16 Lock Washers per Seat.