

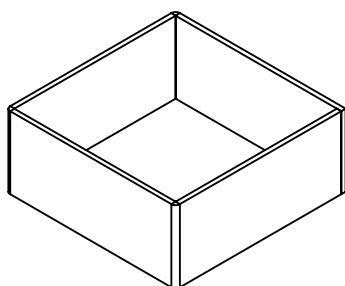
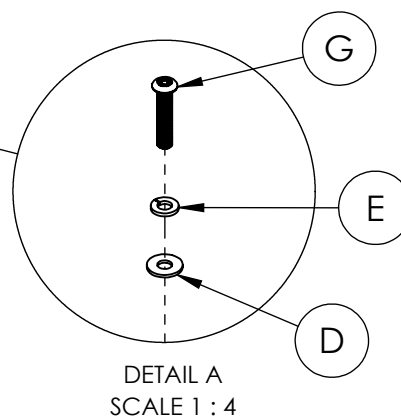


Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.


Parts List				Tools Needed
ITEM	QTY.	PART NUMBER	DESCRIPTION	Low RPM Variable Speed Drill
A	1	004-330	Base, Forma, Foam, Wraparound, Cube W/ Laminate Top	Rubber Mallet
B	1	005-227	Base, Forma, Wood, Cube W/ Laminate Top	Pin in Torx® Bit, T-40
C	1	050-2929-PA-YYZZ	Table Top	Pin in Torx® Bit, T-25
D	8	025-036	Washer, Flat, 5/16" ID x 3/4" OD, Yello Zinc	
E	8	025-011	Washer, Lock, Split, 5/16", Blk Ox	
F	4	021-094	Screw, Machine 5/16"-18 x 1.25" L, BH, Pin in Torx® T40, Black Oxide	
G	4	021-116	Screw, Machine 5/16"-18 x 1.5" L, BH, Pin in Torx® T40, Black Oxide	
H	28	021-166	Screw, Sheet Metal, #10-16 X 1-5, BH, Pin in Torx T-25, Blk. Ox.	
I	1	HN850-800-XXX/HN855-800-XX	Hondo Nuevo Molded Plinth Base/Steel Base, Chair	

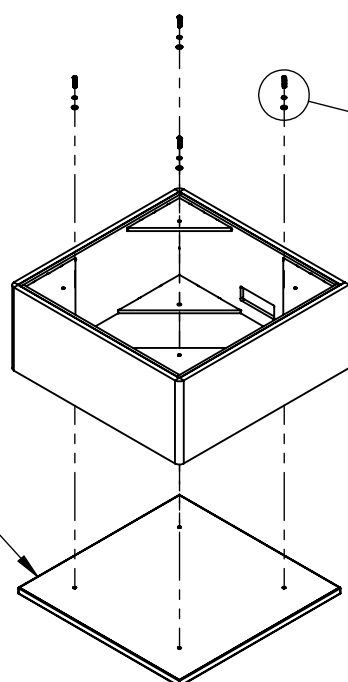

1. Upholster Frame.

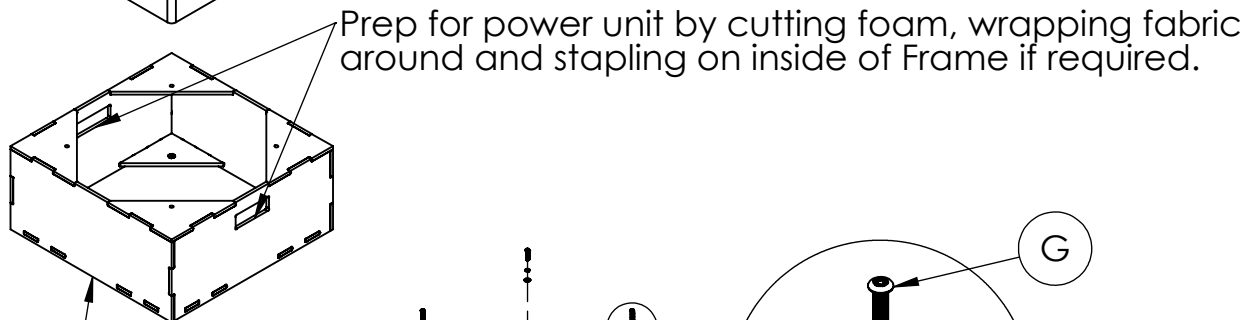


2. Assemble Table Top to Frame as shown (Make sure assembly is done on a soft surface as to not damage Table Top)


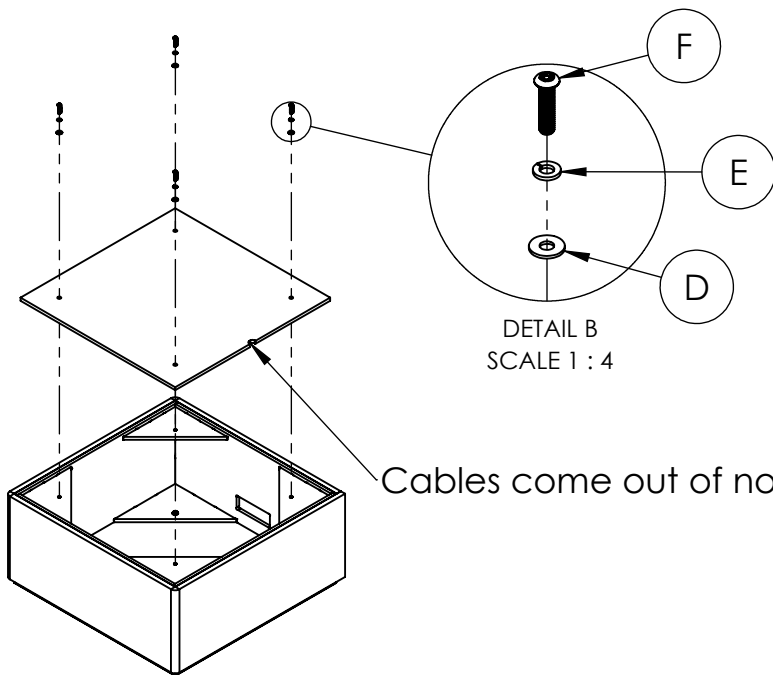


Cables come out of notch cut out if power unit is required.

3. Assemble Enclosure Panel to Base as shown.

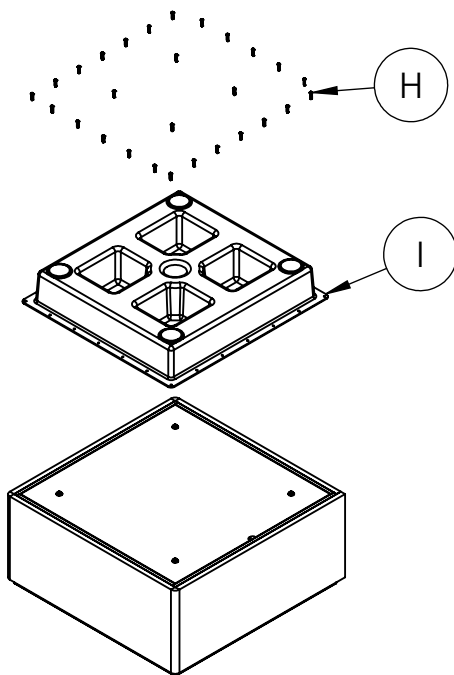

3. Assemble plinth base to Enclosure Panel as shown.
(Steel base can be substituted for Plinth Base.)

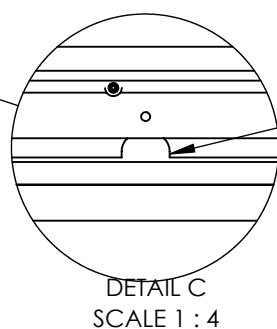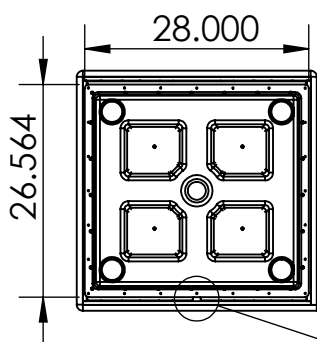

If no power unit is needed Plinth base should be assemble the long way to cover notch cut out. (This should also be done for Steel Base)