




Ripple Chair Ballasting Assembly Instruction

Model Number
RPXX-XXX-MXXX-W

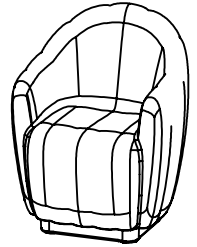

www.norix.com • TEL 800 234-4900

Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

Parts List				Tools Needed
ITEM	QTY.	PART NUMBER	DESCRIPTION	
A	1	RPXX-XXX	Ripple Chair	Low RPM Variable Speed Drill
B	1	RPXXB-MXXX	Ripple, Plinth Molded Base	Pin in Torx Bit, T-25
C	16	001-510	Ripple, Ballast Plate	
D	6	021-218	Screw, Wood, #12 X 3" L, FH, Phillips, Zinc Plated	
E	12	021-144	Screw, #10-16 X 1.5"L, BH, P-in-T T-25, Blk. Ox.	

1. Unscrew all Screws (E) and remove Molded Base
2. Attach Ballast Plates (C) using Wood Screws (D)
3. Install Molded Base(A) with Screws(E). Reuse screws if possible.

