



Titan Wardrobe Units Wall Mount Assembly Instructions




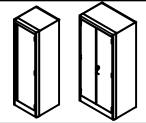


Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

<u>Parts List</u>			
ITEM	QTY	PART NUMBER	DESCRIPTION
Α	1	TNT8XXX	Titan Wardrobe Unit
В	4	TNTXXX	Wall Anchor Hardware Kit

Tools Needed
Low RPM Variable Speed Drill
5/8" Drill Bit

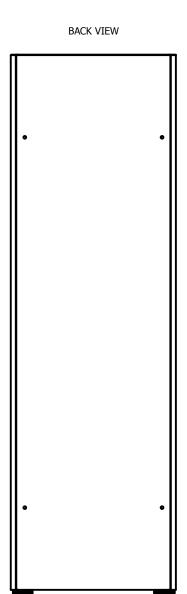


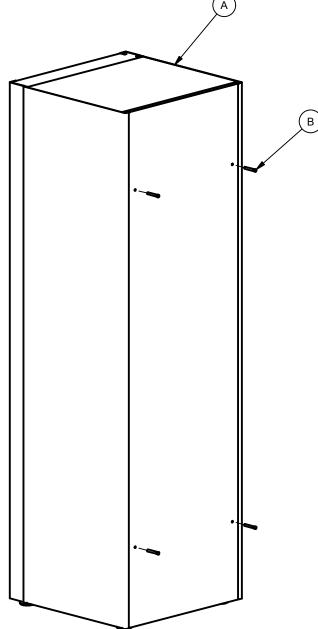

STEP 1: Place unit against wall and open door to mark anchor locations through the back of the unit. Remove unit and drill 5/8" holes into wall. Install anchors in unit and place it against wall, pressing the toggles through the holes. Tighten hardware.

Titan Wardrobe Units Wall Mount Assembly Instructions

Model Number TNT8100, TNT8101, TNT8200, TNT8201

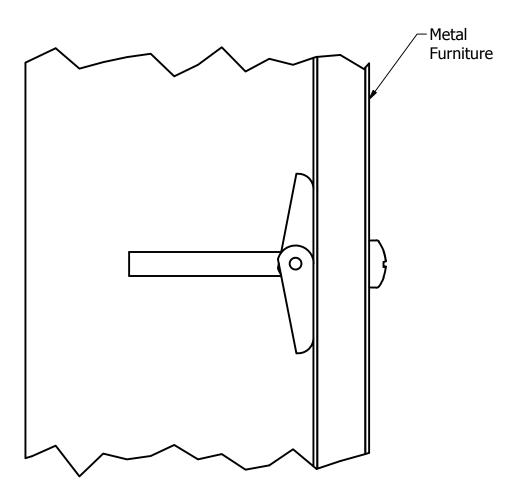

LATH/PLASTER OR SHEETROCK WALLS

Supplied Fastener: 1/4" X 3" Toggle Bolt