


Protege II Headboard Kit Assembly Instructions

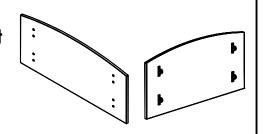

www.norix.com • TEL 800 234-4900

Model Number: PROT050-XX

Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

PARTS LIST				
ITEM NO.	QTY.	PART NUMBER	DESCRIPTION	
Α	1	030-PT005-XX	Protege II Headboard	
В	4	027-PT002-02	Protege II, Headboard Clamp, Black	
С	8	021-143	Binding Post, 8-32 x .1/2"	
D	8	021-145	Binding Post Screw	

Tools Needed			
Variable Speed Drill			
Flat Head Driver			

- Place the Clamps (B) to the 1st and 3rd straight bars outside of either end of the bed as shown.

 Secure the Headboard (A) to the end of the Protege Bed using (8) Binding Post (C) and (8) Screws as shown.

