


Coupe Chair Bolt-Down Instructions

Model Number
CP10-XXX-Y

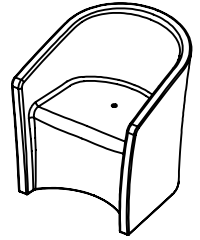


Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

PARTS LIST

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	CP10-XXX-YYY-Z	Coupe, Lounge Chair
2	4	029-075	Five Inch Bolt Down Plate
3	4	021-077	Screw, Machine 1/4"-20 X 1", FH, Pin in Torx® T-27, SS


Tools Needed

Low RPM Variable Speed Drill
071-001 Pin In Torx Bit T27

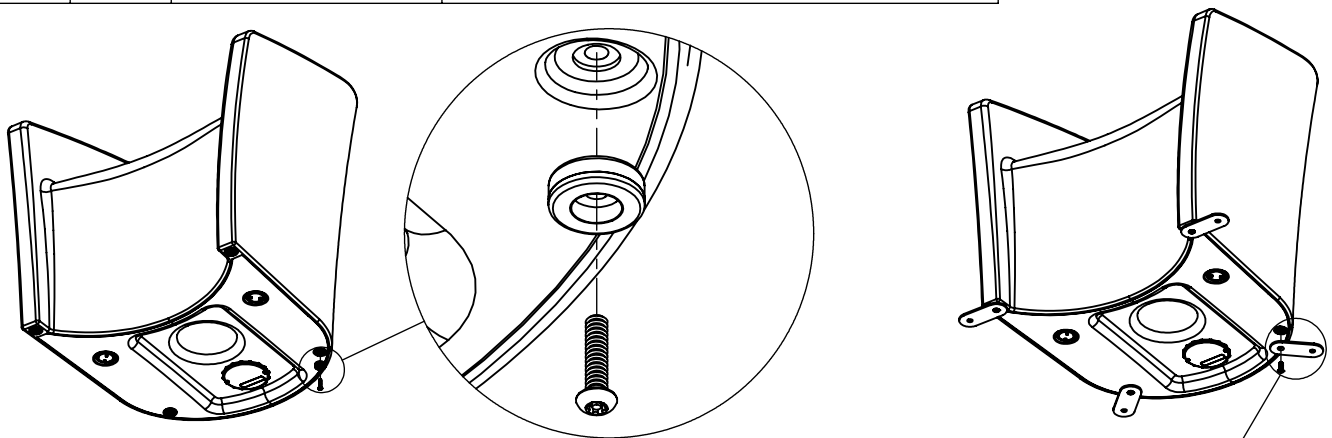

1. Remove Glides and Screws from chair.

2. Install Bolt-Down Brackets and Flat Head Screws. Do not overtighten.

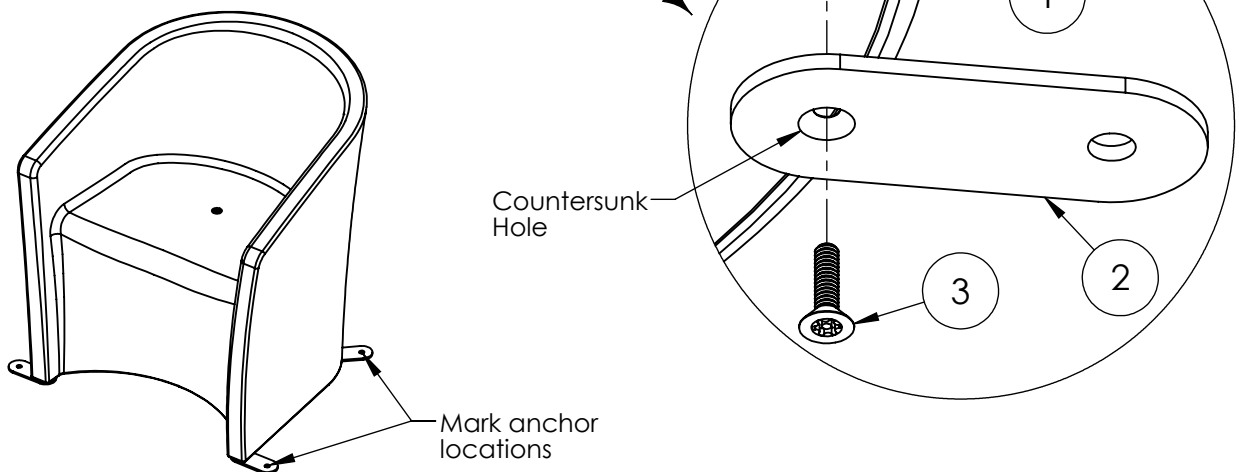

3. Place chair in desired location with brackets at desired angles. Mark anchor locations on the floor. Secure chair to floor with anchoring hardware.