


Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

NOTE: ARM CHAIR IS USED AS AN EXAMPLE BUT THE FOLLOWING INSTRUCTIONS CAN BE USED IN ALL FORMA PRODUCTS.

1. PUT PRODUCT UPSIDE DOWN WITH A PROTECTIVE SHEET UNDERNEATH.

2. REMOVE PLINTH BASE BY REMOVING WOOD SCREWS AS SHOWN BELOW.

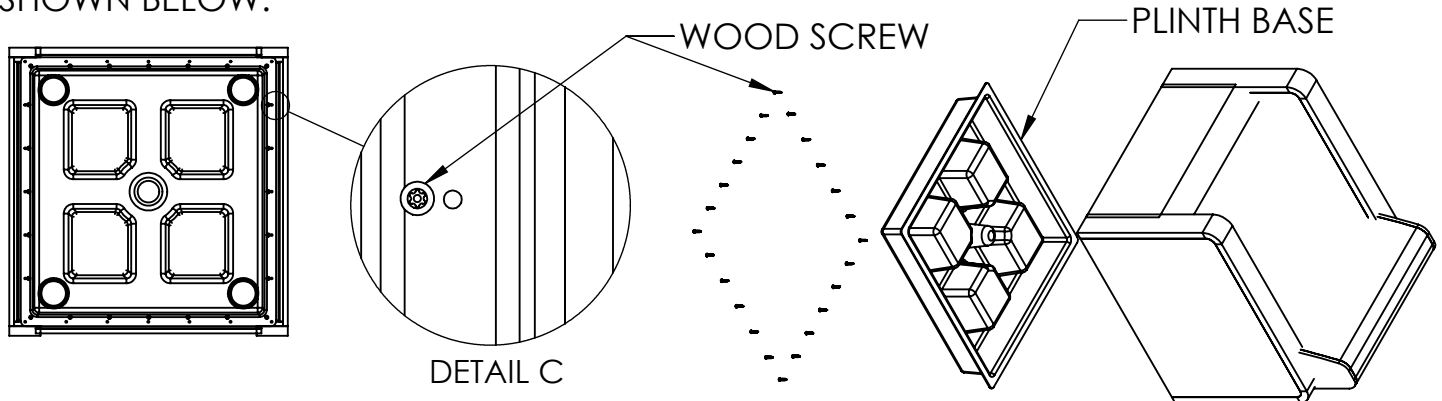

Tools Needed

Variable Speed Drill


Rubber Mallet

T40 Drill Bit

T25 Drill Bit

3. REMOVE SCREWS AND WASHERS FROM COVER PLATE.

4. REMOVE COVER PLATE AS SHOWN BELOW.

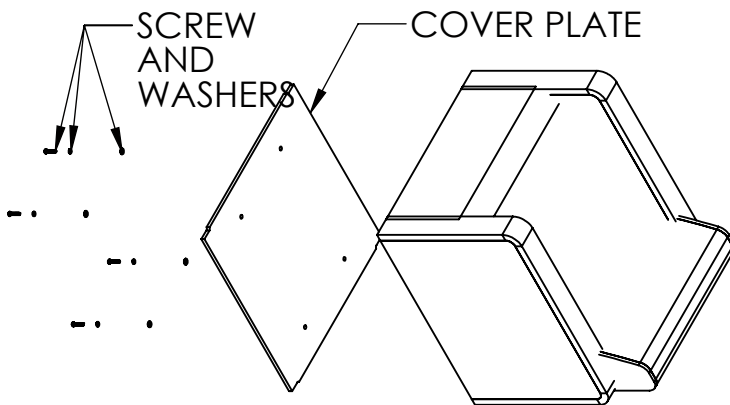

5. INSERT BALLAST MATERIAL INTO CHAIR.

6. FINISH BY REPEATING STEPS IN REVERSE ORDER. (COVER PLATE MAY NEED TO BE HAMMERED IN)

7. TRY TO TIGHTEN PLINTH BASE WITH SCREW AT ANGLE SHOWN BELOW.

