


**Forma Plinth Base or Steel Base  
to Rocker Base  
Replacement Instruction  
(Arm Chair ONLY)**

# NORIX®

www.norix.com • TEL 800 234-4900

**ROCKER KIT C011-057-XXX**

**Model Number**  
**FA-XXXX-XXXX-XXXX.AXXX**  
**OR**  
**FA-XXXX-XXXX-XXXX.BXXX**  
**TO**  
**FA-XXXX-XXXX-XXXX.RXXX**

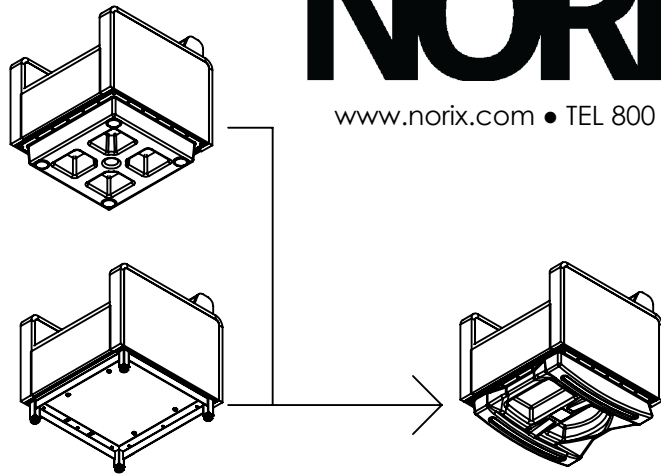


Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900.  
 Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

**Parts List**


ITEM	QTY.	PART NUMBER	DESCRIPTION
A	26	021-166	Screw, #10 X 1", BH, Pin in Torx T-25
B	1		Forma, Spacer Panel, Rocker Base
C	1	HN851-800-ZZZ	Hondo Nuevo Rocker Base

**Tools Needed**

Low RPM Variable Speed Drill  
 071-007 - Pin in Torx Bit, T-25

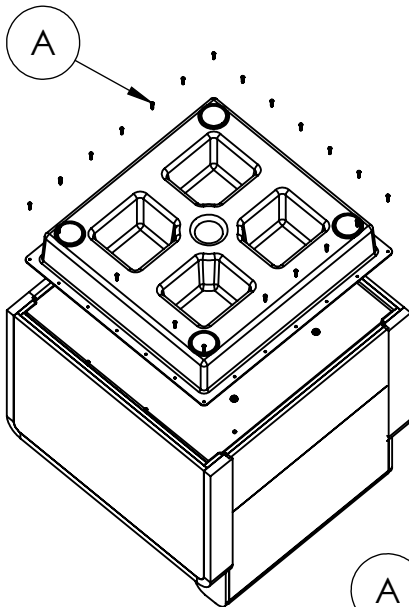

**STEP 1: PUT CHAIR UPSIDE DOWN ON A CLEAN SURFACE.**  
 REMOVE ALL SCREWS (A) AROUND THE OUTER PERIMETER OF THE BASE.  
 NOTE: DO NOT REMOVE THE LARGER BOLTS AT THE CENTER OF THE CHAIR BOTTOM.

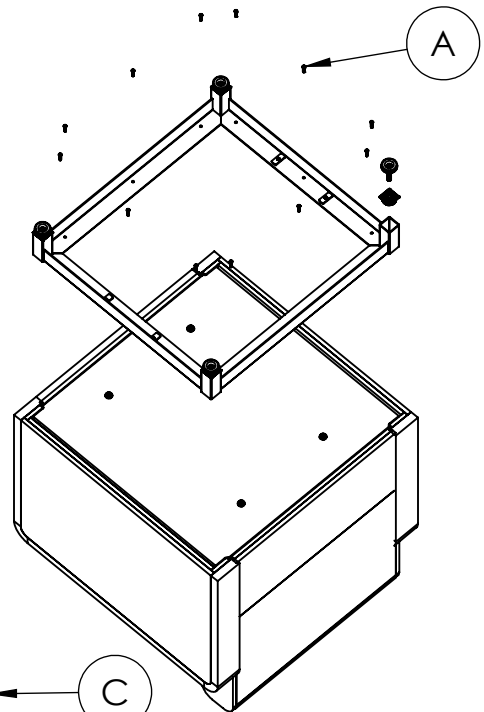

**STEP 3: LOCATE AND CENTER NEW ROCKER BASE (C) WITH MARK "FRONT" FACING TO FRONT OF CHAIR.**  
 SECURE ROCKER BASE (C) WITH SCREWS (B) AT DIMPLED LOCATIONS.

**STEP 2: POSITION THE SPACER PLATE (B) SO THAT IT IS CENTERED ON THE BOTTOM OF THE CHAIR AND THE CHAMFERED EDGE IS FACING UP.**  
 SECURE THE SPACER PLATE (B) TO THE BOTTOM OF THE CHAIR WITH SCREWS (A) AT HOLE LOCATIONS.

