



Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.


Parts List				Tools Needed
ITEM	QTY.	PART NUMBER	DESCRIPTION	Variable Speed Drill
A	2	011-045	Forma Gang Brkt Plinth Base LH	7/16" Drill Bit
B	2	011-046	Forma Gang Brkt Plinth Base RH	Jack Nut Installation Tool
C	2	011-047	Forma Gang Brkt Plinth Base Middle	Pin in Torx® Bit, T-27
D	8	021-071	Screw, Machine, 1/4-20 x 1, Zinc	Ratchet Socket Wrench
E	4	021-126	Bolt, Carriage, 5/16-18 x 3/4, Zinc	Paint Marker
F	4	025-007	Nut, 5/16-18 Hex, Zinc, Loctite	
G	12	025-011	Washer, Lock, Split, 5/16, Zinc	
H	8	025-015	Jack Nut, 1/4-20	
I	8	025-022	Washer, Flat, 9/32 ID x 5/8 OD, Zinc	
J	4	026-006	Washer, Flat 11/32 ID x 3/4 OD, SST	

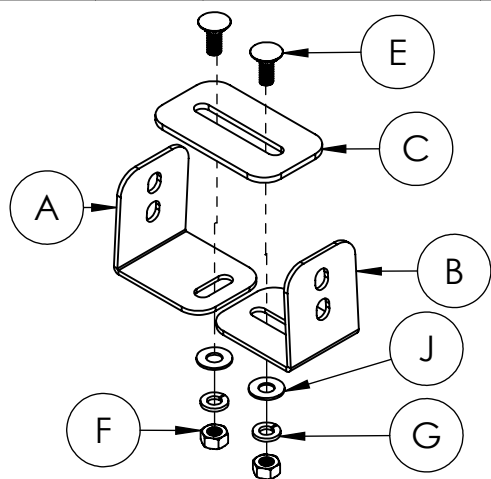


1. Assemble Ganging Brackets together like shown above and hand tighten.

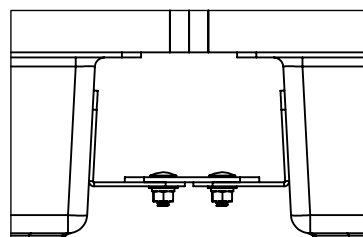


2. Extend Ganging Brackets outward until contact with Plinth Base like shown above to mark drill locations.

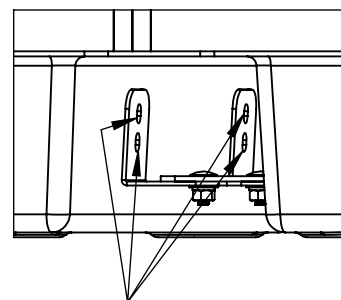

3. Mark drill locations for Jack Nut with Paint Marker. Remove Ganging Brackets and drill 7/16" hole in 8 plcs.

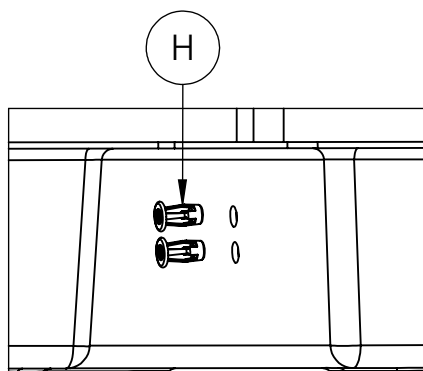

4. Install Jack Nuts into Plinth Base using Jack Nut installation tool.

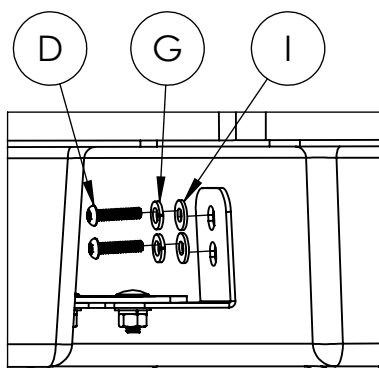

5. Assemble Ganging Bracket onto Plinth base using Jack Nut locations like shown above. Start by hand threading.

6. Finish by tightening all screws and nuts with wrench.