


Seat & Back Cushion Replacement Assembly Instructions

Model Number
LA-XXXX-XXXX; LC-XXXX-XXXX;
LE-XXXX-XXXX; LK-XXXX-XXXX

www.norix.com • TEL 800 234-4900

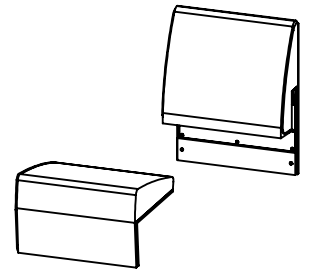


Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

Parts List


ITEM	QTY.	DESCRIPTION
A	1	SEAT CUSHION
B	1	BACK CUSHION

Tools Needed


Low RPM Variable Speed Drill
Pin in Torx® Bit, T-40
Pin in Torx® Bit, T-45
Tri-Groove Socket

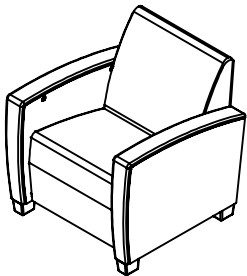


Lounge Arm Chair
Full Apron

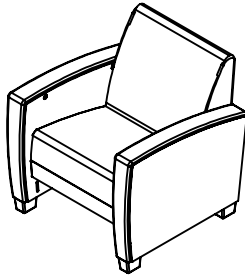


Lounge Arm Chair
Short Apron

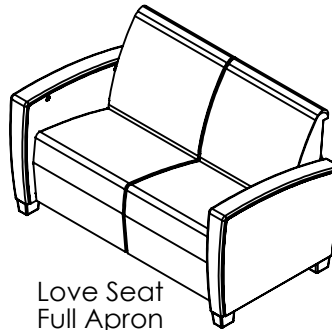


Love Seat
Full Apron

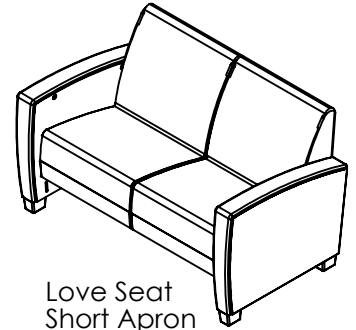


Love Seat
Short Apron

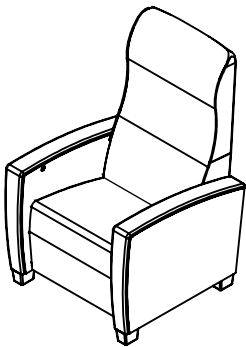


Lounge High Back
Arm Chair
Full Apron

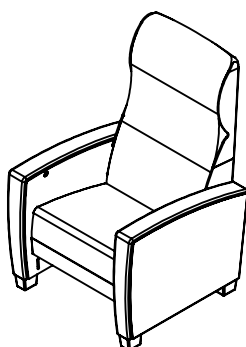


Lounge High Back
Arm Chair
Short Apron

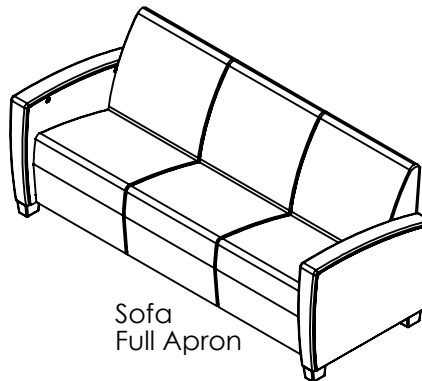


Sofa
Full Apron

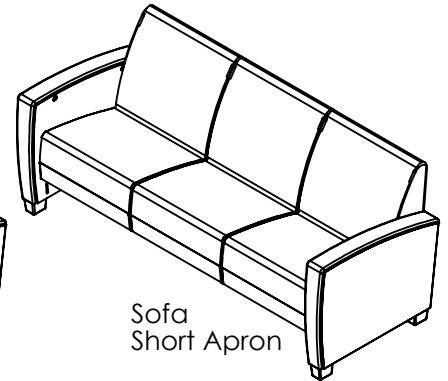

Sofa
Short Apron

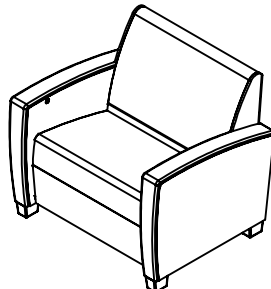

Bariatric Lounge Chair
Full Apron

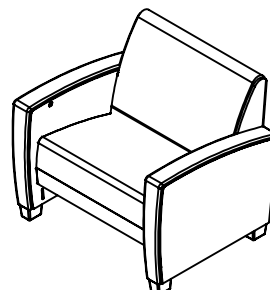


Bariatric Lounge Chair
Short Apron

Full Apron


STEP 1:

Place the chair on its back, on a flat protective surface to avoid scratching the chair. If the chair has a closed bottom option, then remove the (4) screws from the bottom cover plate and remove the cover.

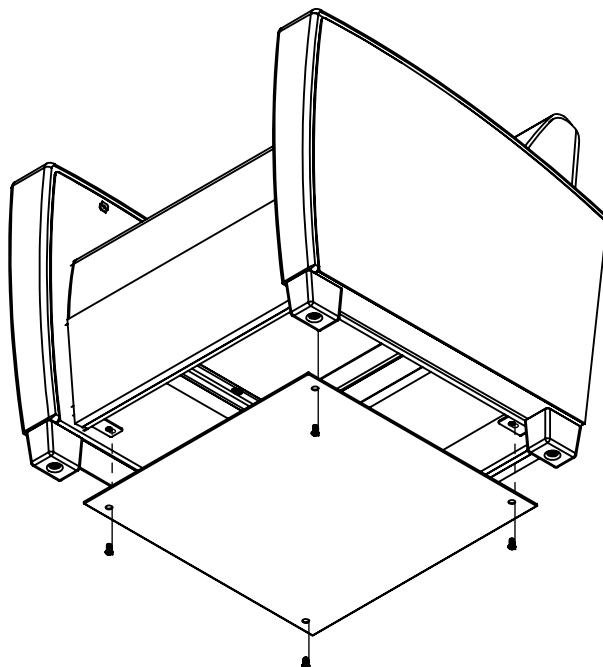

STEP 2:


With the underside of the chair exposed, remove the (4) screws that secure the (4) brackets to the seat cushion and back cushion.

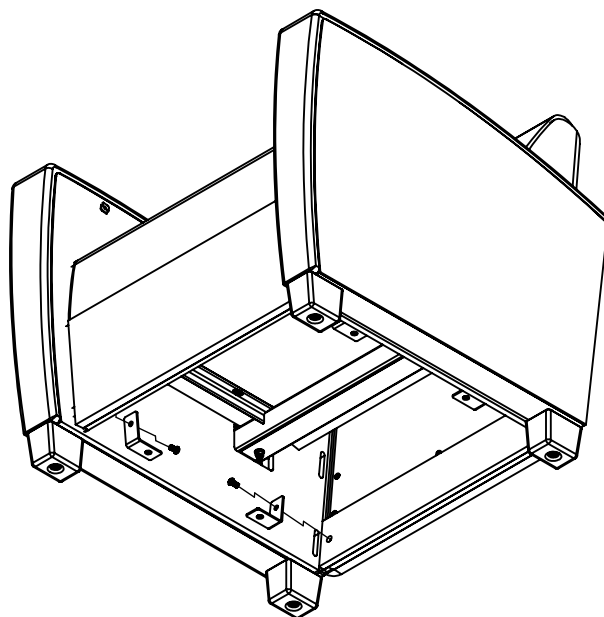


Full Apron

STEP 3:

Follow the inside of the back up to find (3) barrel nuts and remove them from the back tube. Remove the back cushion.

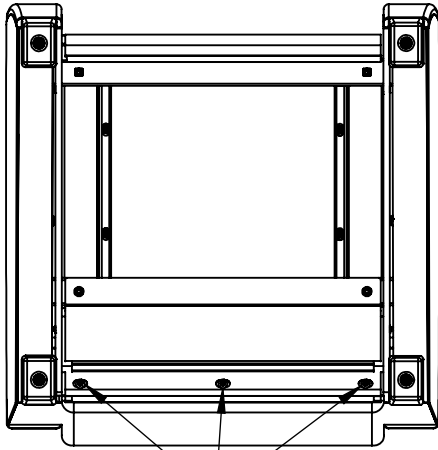


Bottom View location
of (3) Barrel Nuts

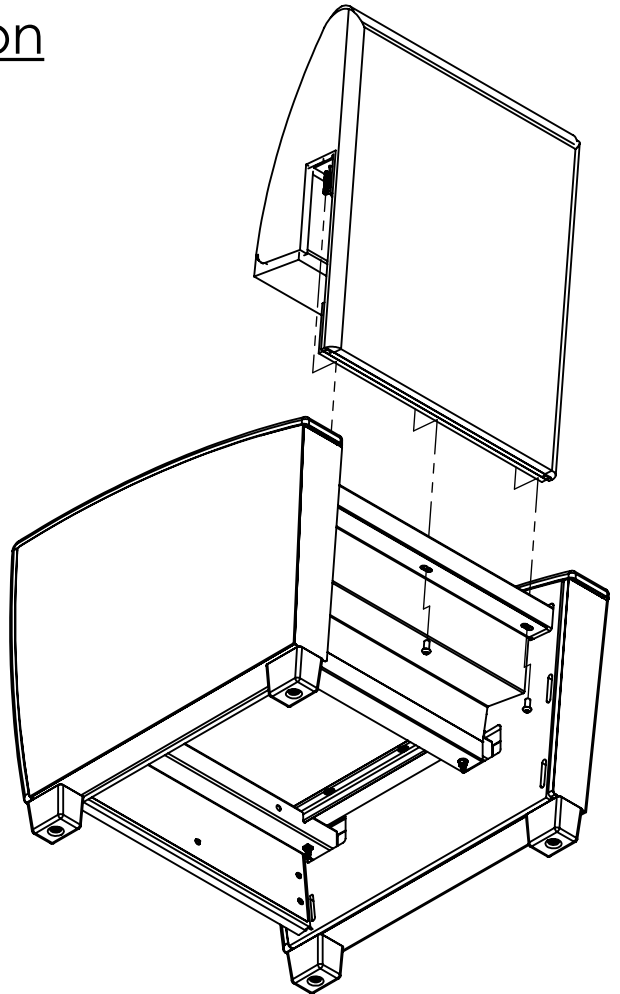


Rev. B - 7/19/21
091-880

STEP 4:

On the underside of the seat remove the four bolts from the seat pan holding the seat cushion. Remove the seat cushion.

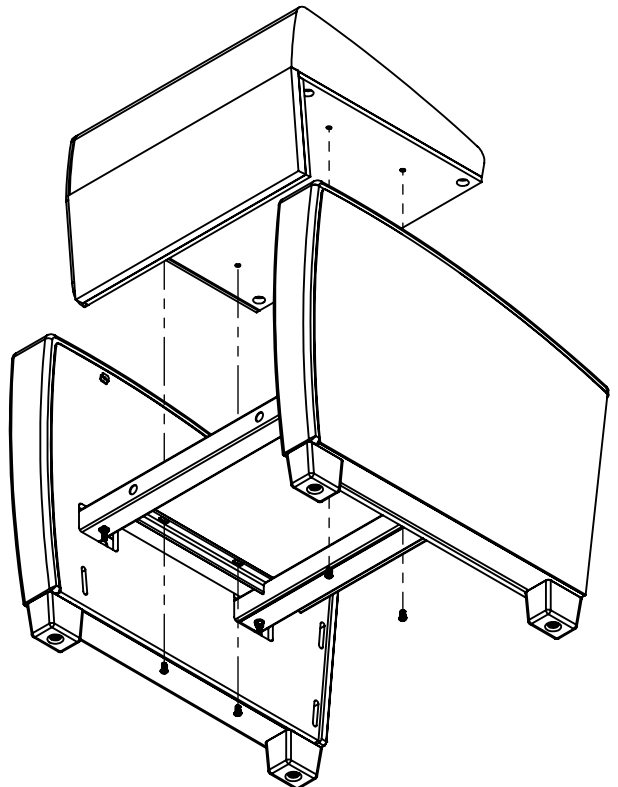


Short Apron

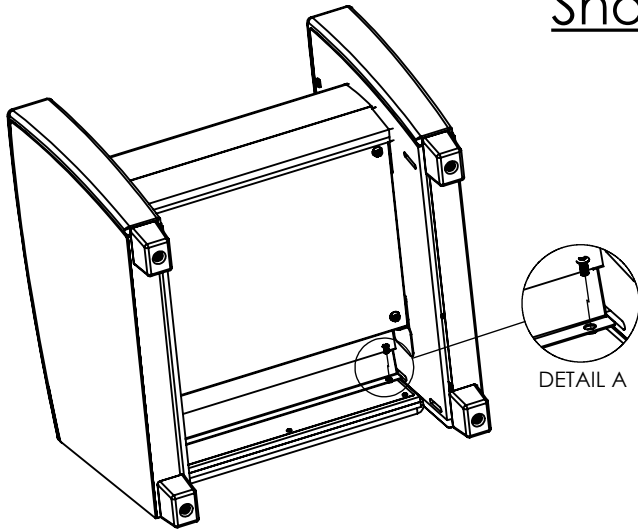

STEP 1:


Place the chair, on its back, on a flat protective surface to avoid scratching the chair. Then remove the (2) screws that secure the (2) brackets to the back cushion.

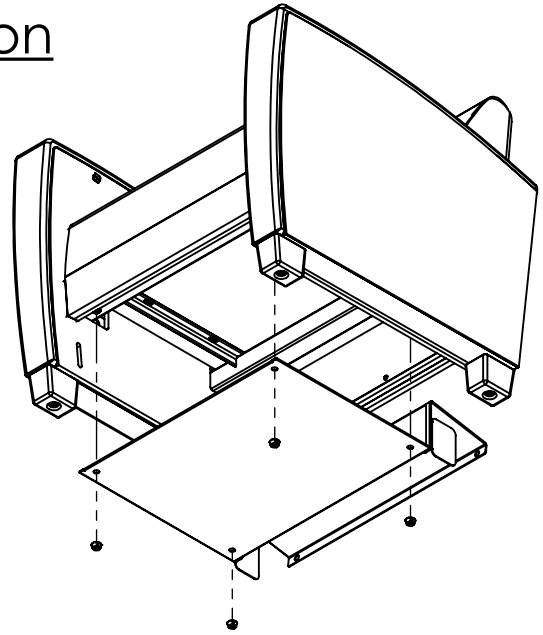

STEP 2:


With the underside of the chair exposed remove the (4) Tri-Groove Nuts from the bottom cover plate and remove the cover.

(Note: The Tri-Groove Nuts require a Tri-Groove Socket to be removed. Socket can be purchased from McMaster-Carr #7393A38)

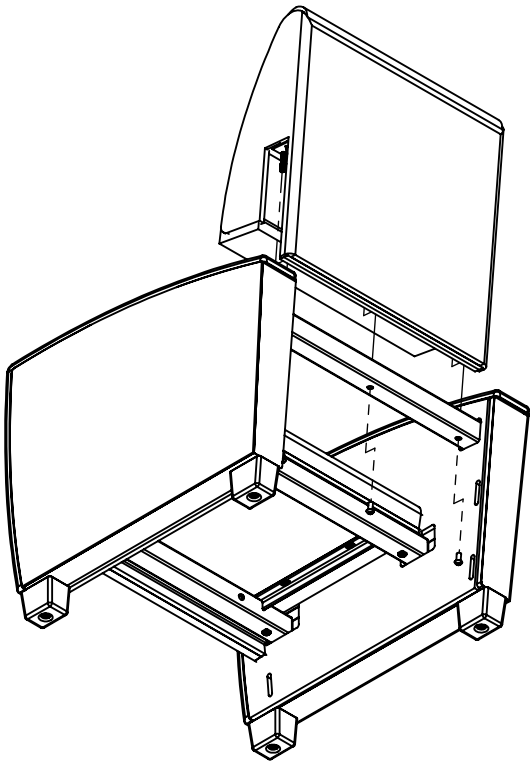

STEP 3:

Follow the inside of the back up to find (3) barrel nuts and remove them from the back tube. Remove the back cushion.

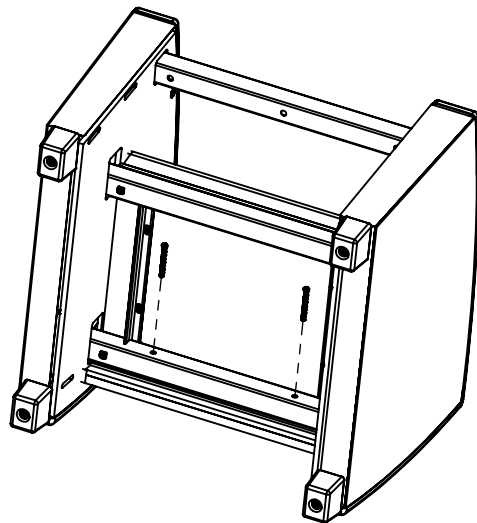

STEP 4:

On the underside of the seat remove the (2) bolts from the seat pan holding the front of the seat cushion.

Short Apron

STEP 5:

On the underside of the seat remove the (4) bolts from the seat pan holding the front of the seat cushion. Remove seat cushion.

