Oasis Classroom Table Bolt Down Assembly Instructions

For Model Number O23072-XXXXXXXXXXXXXXXXXX

www.norix.com • TEL 800 234-4900

URNITU

F


R E


Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

PARTS LIST				
ITEM	QTY	PART NUMBER	DESCRIPTION	
Α	1	033-3206-XX	Oasis Classroom Table Frame	
В	1	053-3072-MA-YYZZZ-J	Top, Oasis, 30x72, Juvenile Class, Laminate Top, Molded-Edge	
С	3	033-3205-XX	Oasis Bolt Down Leg	
D	8	026-006	Washer, Flat, 11/32 ID x 3/4" OD x 0.050 THK 18-8 SST	
E	8	025-030	Washer, Lock, Split, 5/16", Blk Ox.	
F	8	021-050	Screw, 5/16"-18 x 1" BH, Pin in Torx T-40, Black Oxide, Loctite	
G	12	021-002	Screw, Machine 5/16"-18 X 1-1/4" L, FH, Pin in Torx® T40, Black Oxide, Thd. Lk.	
Н	3	024-003	Anchor, Secure Bolt, 3/8" x 2-1/2" L, 5/16"-18 Thread, BH, Pin in Torx® T45, SST Post	
J	2	024-001	Anchor, Concrete, Wedge, 3/8"-16 X 3.5", Zinc	
K	2	026-008	Nut/Washer Assy. 3/8"-16, Zinc, Thd. Lk.	
L	3	025-009	Washer, Flat, 3/8"	
				Tools Needed

<u>Step 1:</u>

Place Table Top on protected surface. Attach Leg Frame to Table Top using (8) 5/16-18 x 1" Screws(**F**), (8) 5/16 Lock Washers(**E**), and (8) 11/32 Flat Washers(**D**). Tools NeededLow RPM Variable Speed Drill5/8" Magnetic Deep Socket1/4" Hex DriverRubber Mallet24" Socket Extension3/8" Concrete Drill Bit

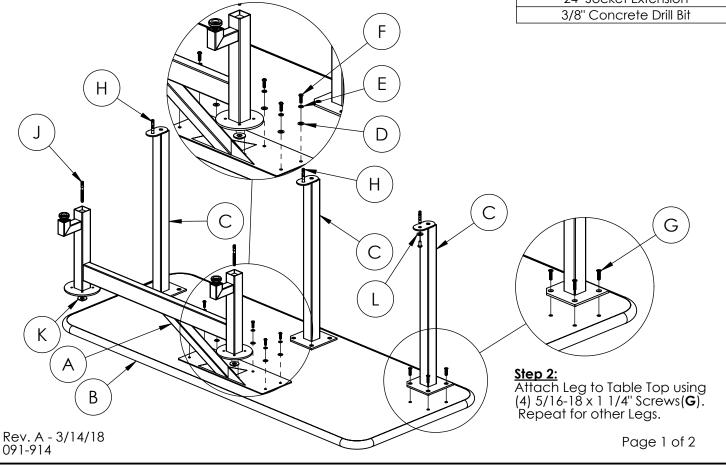

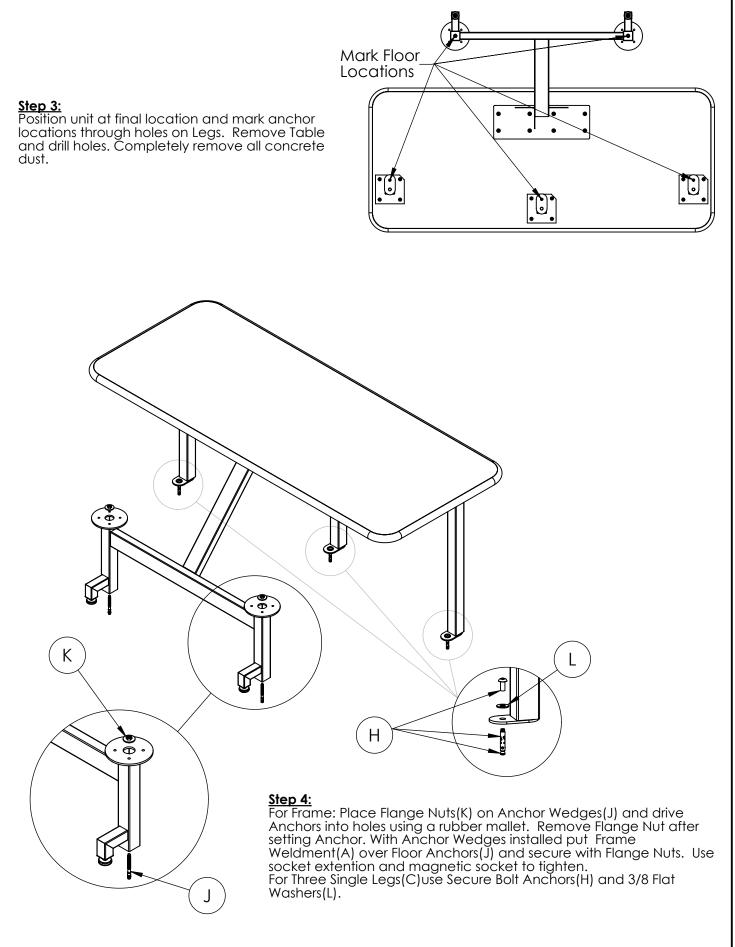

Rev. A - 3/14/18 091-914