


## Seat & Back Cushion Replacement Assembly Instructions


**Model Number**  
LA-XXXX-XXXX; LC-XXXX-XXXX;  
LE-XXXX-XXXX; LK-XXXX-XXXX

www.norix.com • TEL 800 234-4900

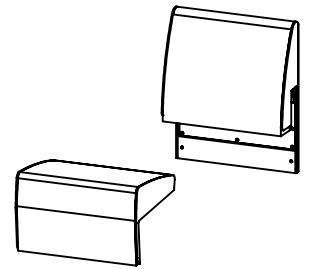


**Assembly Notes:** Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.


Parts List			Tools Needed
ITEM	QTY.	DESCRIPTION	Low RPM Variable Speed Drill
A	1	SEAT CUSHION	
B	1	BACK CUSHION	

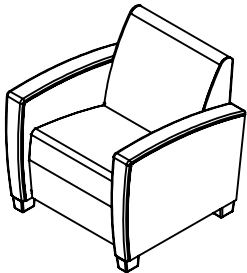

Lounge Arm Chair  
Full Apron

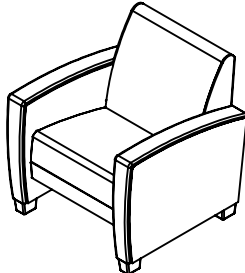


Lounge Arm Chair  
Short Apron

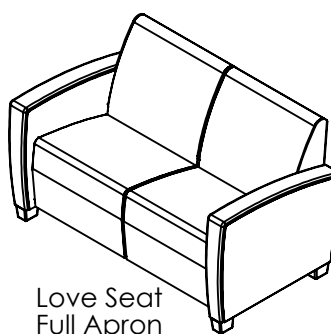


Love Seat  
Full Apron




Love Seat  
Short Apron

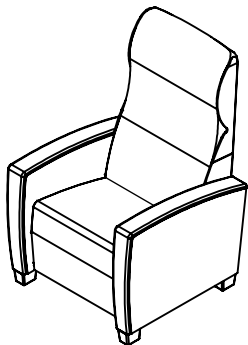


Lounge High Back  
Arm Chair  
Full Apron

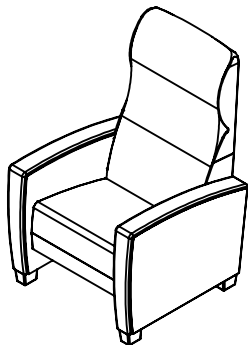


Lounge High Back  
Arm Chair  
Short Apron

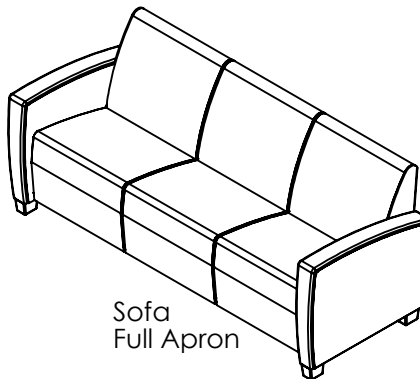


Sofa  
Full Apron

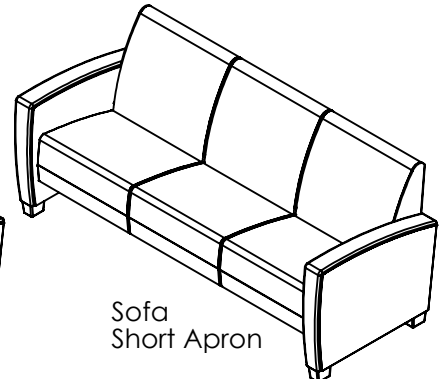

Sofa  
Short Apron

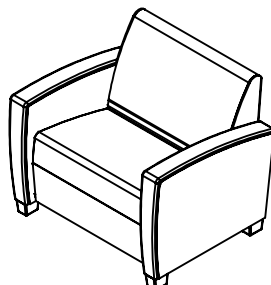

Bariatric Lounge Chair  
Full Apron

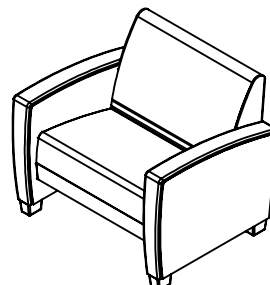


Bariatric Lounge Chair  
Short Apron

# Full Apron


## **STEP 1:**

Place the chair on its back, on a flat protective surface to avoid scratching the chair. If the chair has a closed bottom option, then remove the (4) screws from the bottom cover plate and remove the cover.

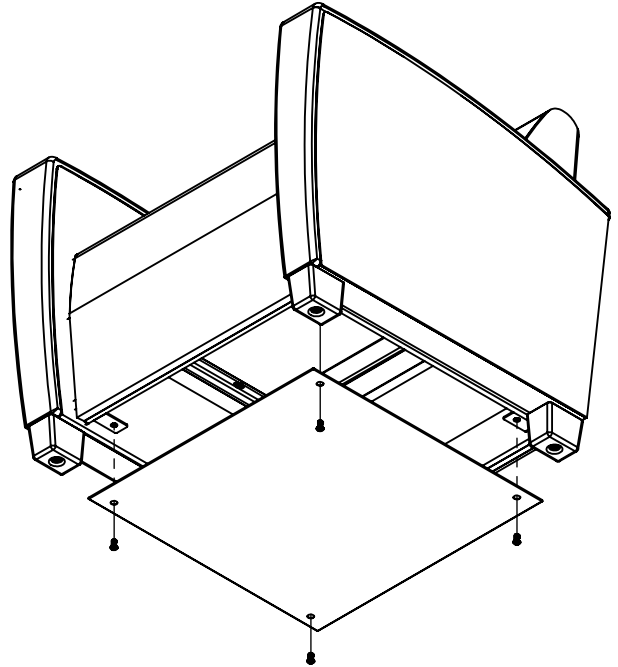

## **STEP 2:**


With the underside of the chair exposed, remove the (4) screws that secure the (4) brackets to the seat cushion and back cushion.

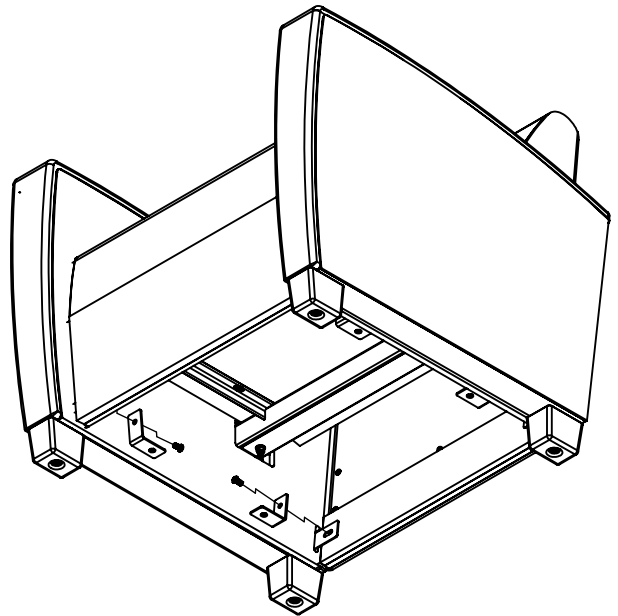


## Full Apron

### **STEP 3:**

Follow the inside of the back up to find (3) barrel nuts and remove them from the back tube. Remove the back cushion.

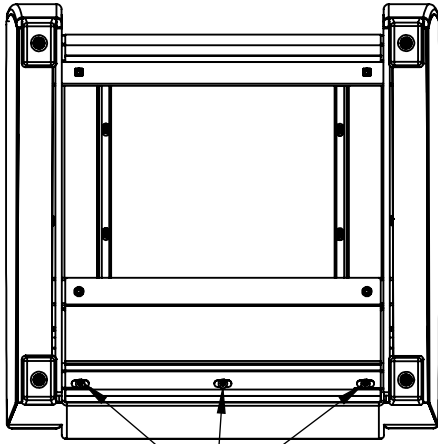


Bottom View location  
of (3) Barrel Nuts

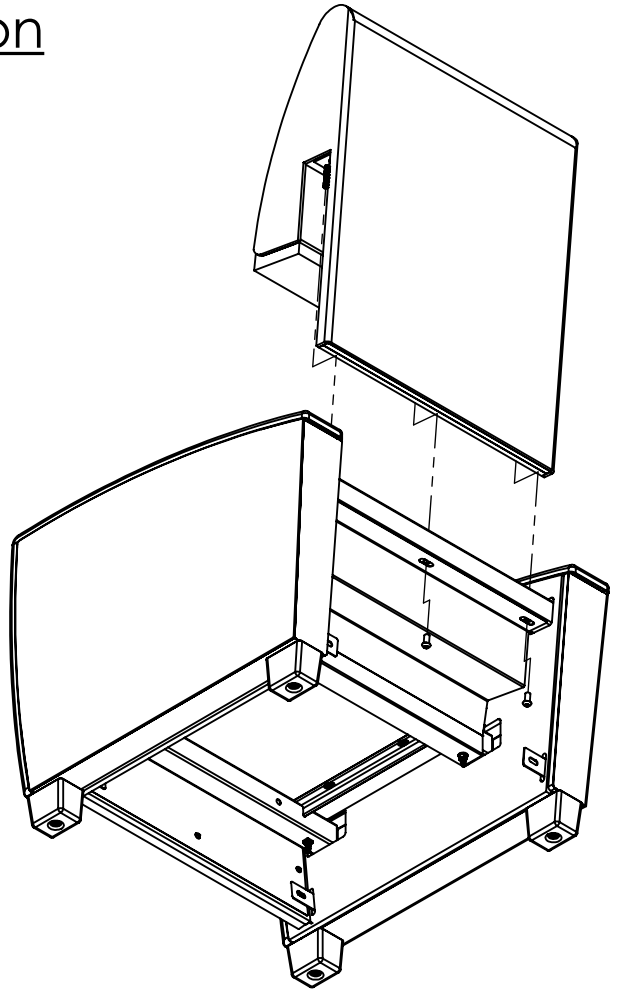


### **STEP 4:**

On the underside of the seat remove the four bolts from the seat pan holding the seat cushion. Remove the seat cushion.

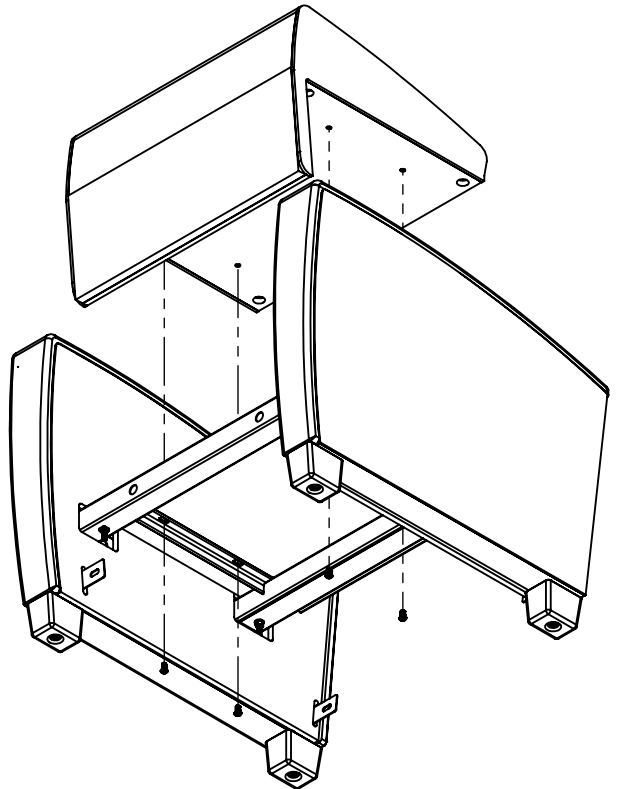


## Short Apron

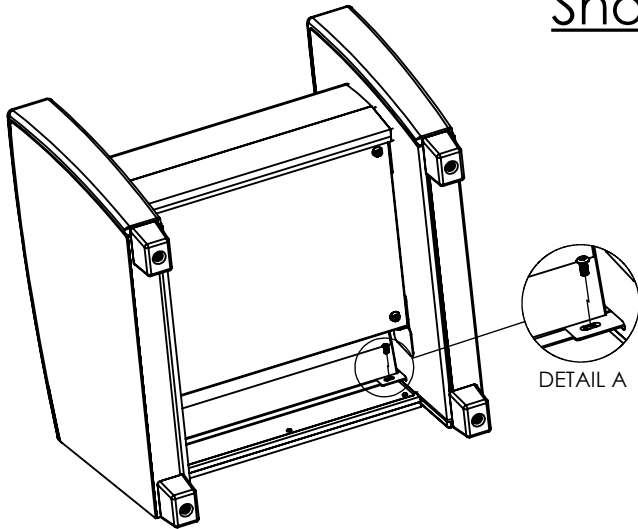

### **STEP 1:**


Place the chair, on its back, on a flat protective surface to avoid scratching the chair. Then remove the (2) screws that secure the (2) brackets to the back cushion.

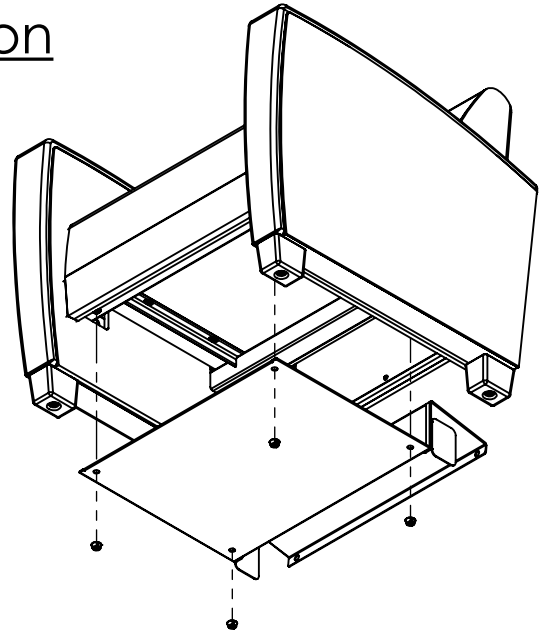

### **STEP 2:**


With the underside of the chair exposed remove the (4) Tri-Groove Nuts from the bottom cover plate and remove the cover.

(Note: The Tri-Groove Nuts require a Tri-Groove Socket to be removed. Socket can be purchased from McMaster-Carr #7393A38)

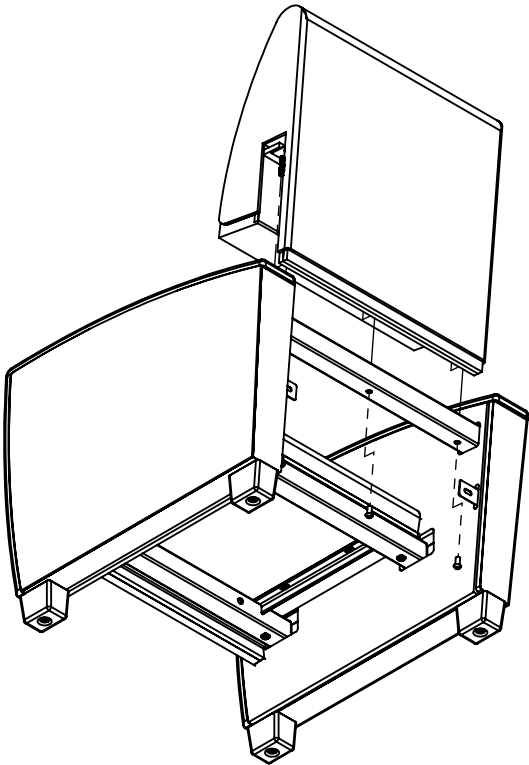

### **STEP 3:**

Follow the inside of the back up to find (3) barrel nuts and remove them from the back tube. Remove the back cushion.

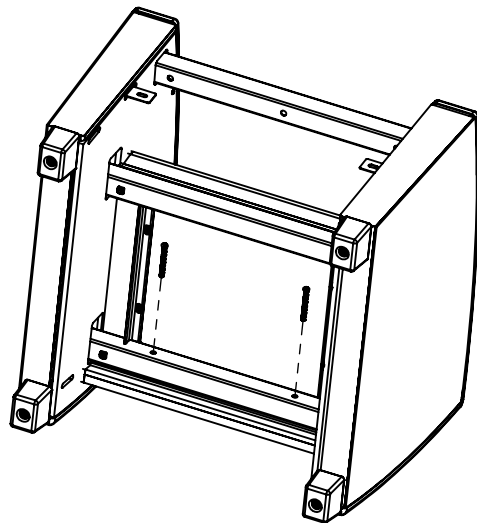

### **STEP 4:**

On the underside of the seat remove the (2) bolts from the seat pan holding the front of the seat cushion.

## Short Apron

### **STEP 5:**

On the underside of the seat remove the (4) bolts from the seat pan holding the front of the seat cushion. Remove seat cushion.

